Start Here

Epson Stylus® T20

Read these instructions before using the printer.

1 Unpack

1 Make sure you have all these items. If anything is missing, contact Epson as described on the back of this sheet.

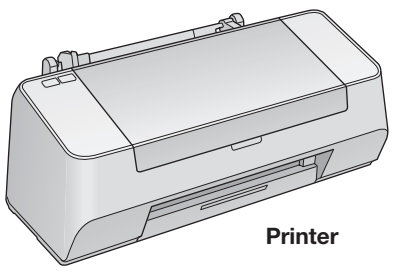

Printer

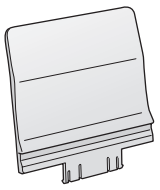

Paper support

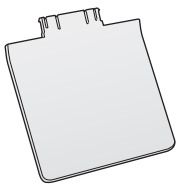

Output tray

Ink cartridges



Power cord



USB cable

Printer software CD

Notices and Warranty

Caution: Do not open ink packages until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

2 Remove all the protective materials from outside and inside the printer.

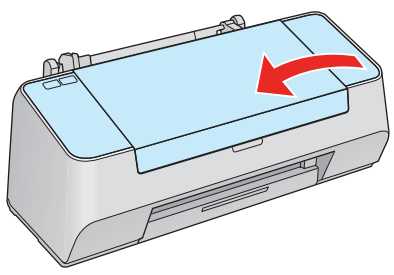

Don't touch or remove the white cable

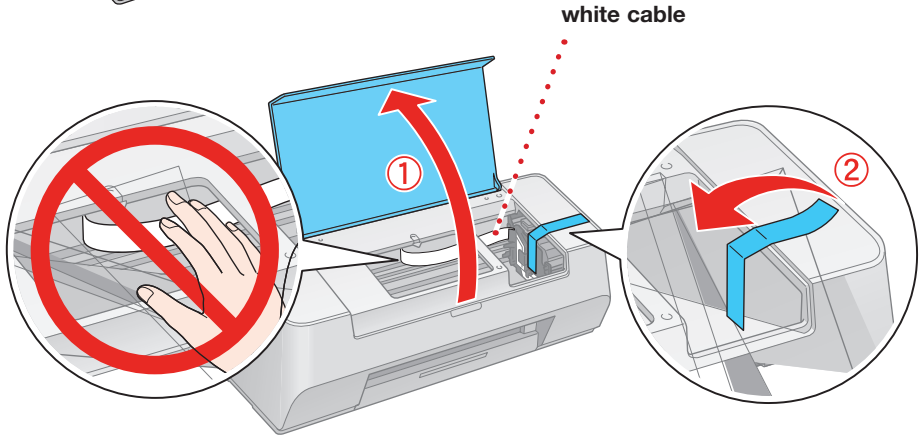

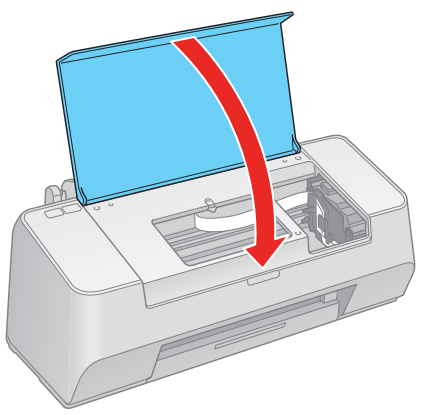

2 Turn On the Printer

1 Connect the power cord.

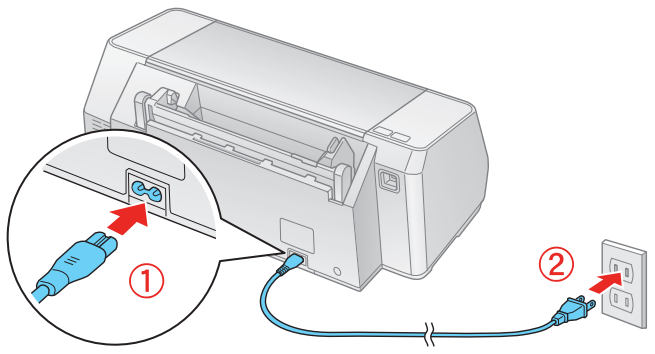

Note: Do not connect the printer to your computer yet.

2 Press the ⏻ power button to turn on the printer. The ⏻ power light flashes and then stays green.

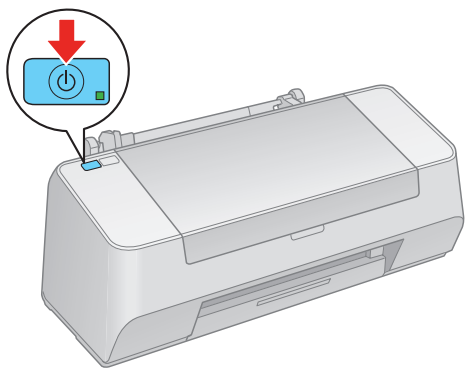

Caution: Use only the printer's ⏻ power button to turn the printer on and off.

3 Install Ink Cartridges

Caution: Keep ink cartridges out of the reach of children and do not drink the ink.

Note: The first time you install ink cartridges, the printer uses some ink to charge the printing system, so print yields may be lower with the first cartridges. Subsequent ink cartridges will last their full rated life.

Don't load paper before installing ink cartridges.

1 Open the printer cover.

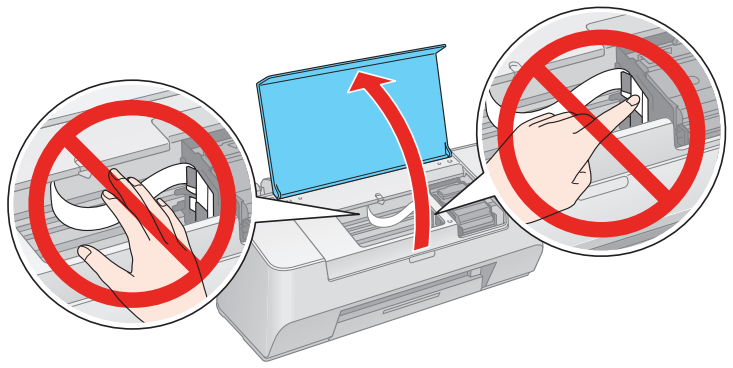

2 Lift open the ink cartridge cover.

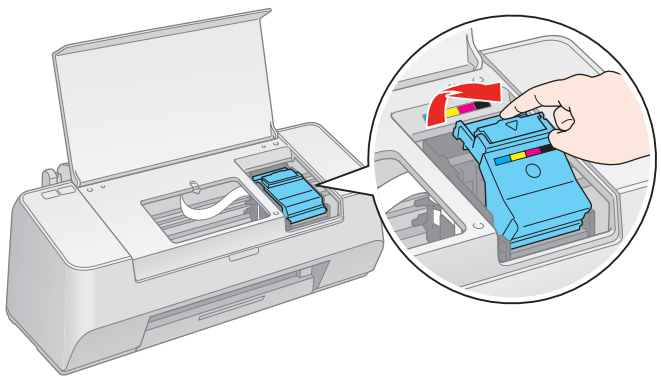

411396900

EPSON
EXCEED YOUR VISION

3 Gently shake the ink cartridges, then unpack them.

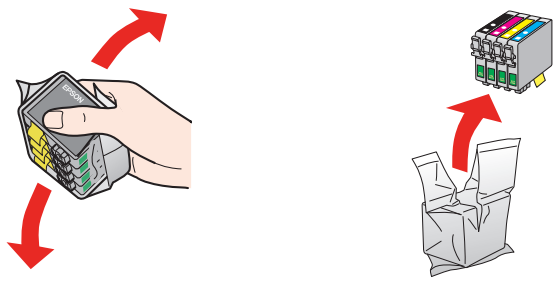

4 Remove only the yellow tape from each cartridge.

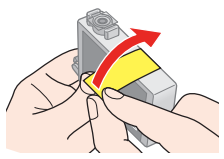

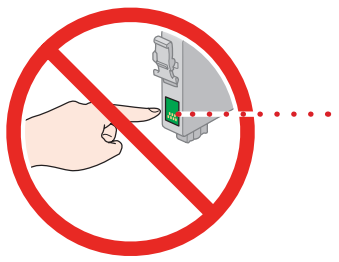

Do not touch the green circuit board

5 Insert each cartridge into the correct slot for its color. Push them down to make sure they click into place.

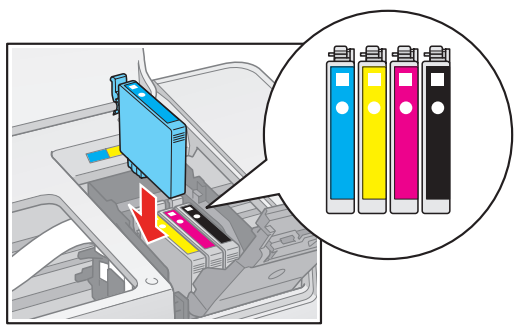

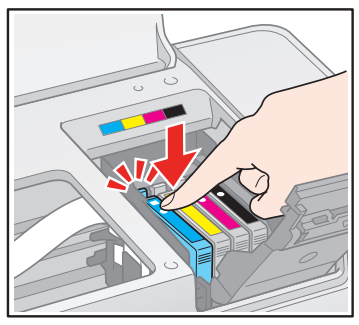

6 Close the ink cartridge cover and press it down.

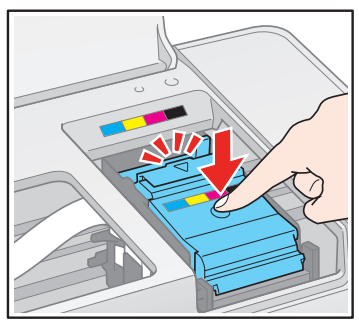

7 Close the printer cover.

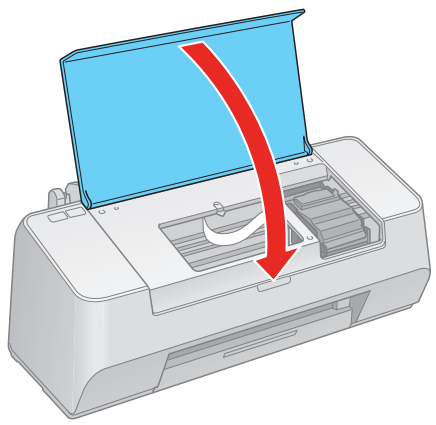

8 Press the ▽ maintenance button to charge the ink. Charging takes approximately 2 minutes.

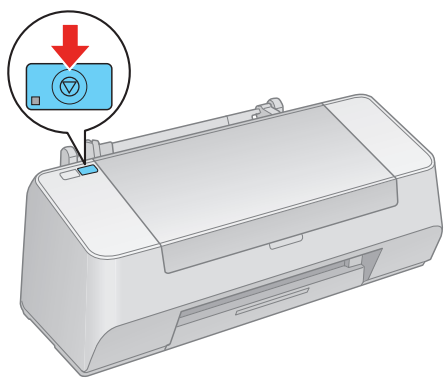

Caution: Never turn off the printer while the green ⏻ power light is flashing or you'll waste ink.

4 Load Paper

1 Slide the paper support into the slot at the back of the printer.

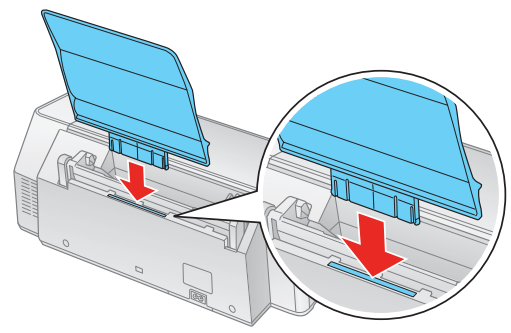

2 Insert the output tray into the slot at the front of the printer.

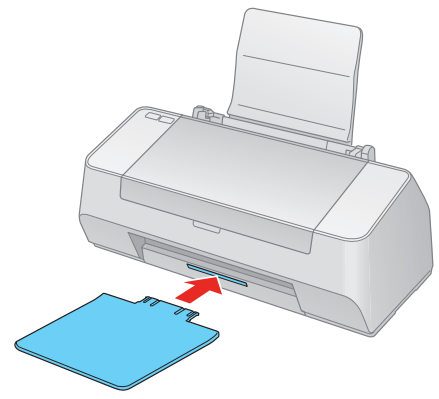

3 Squeeze the left edge guide and slide it to the left.

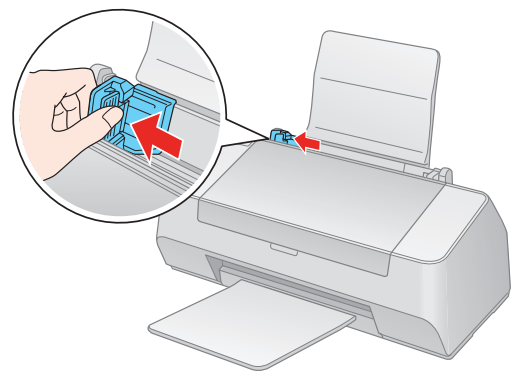

4 Fan a few sheets of paper and place them against the right edge guide. Load the printable side face-up and the short edge first (even when printing landscape-oriented documents).

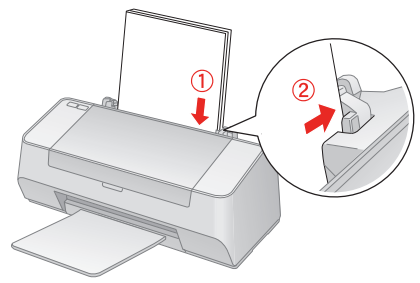

Letter or A4

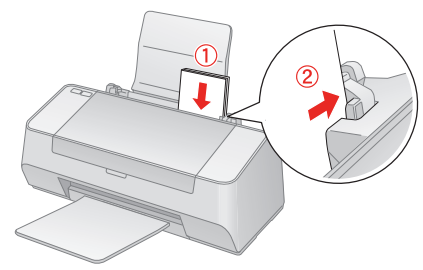

4 x 6 or 5 x 7

Note: Do not load the paper sideways.

5 Squeeze the left edge guide and slide it against the paper.

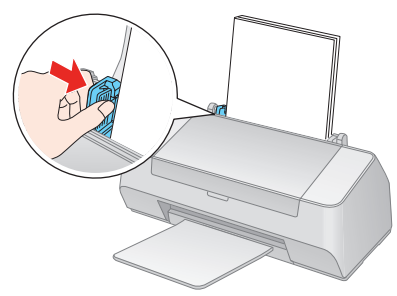

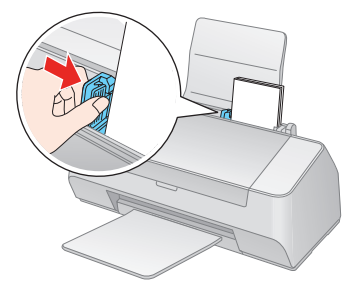

5 Install Software

Your software works with Windows® 2000, XP, and XP Professional x64 Edition and Windows Vista®, and Mac OS® X 10.3.9 to 10.5.x.

Windows

1 Make sure your printer is on but **NOT CONNECTED** to your computer.

Note: If you see a screen like this, click **Cancel** and disconnect the USB cable. You cannot install your software that way.

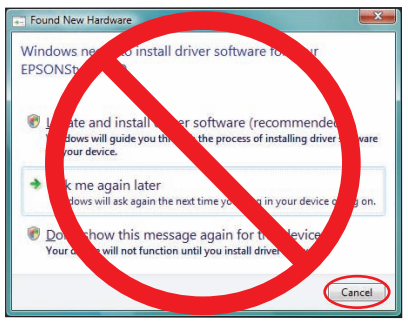

2 Insert the Epson Stylus T20 CD.

With Windows 2000 or XP, go to step 4. With Windows Vista, go to step 3.

3 With Windows Vista, if you see the Auto Play window, click **Run Epsetup.exe**. When you see the User Account Control screen, click **Continue**.

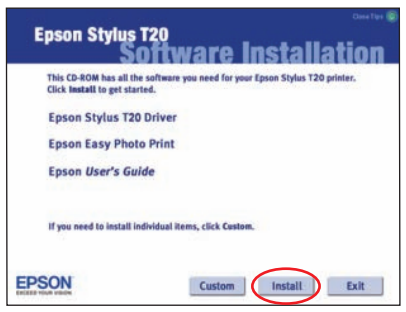
Epson Stylus T20
Software Installation
This CD-ROM has all the software you need for your Epson Stylus T20 printer. Click Install to get started.
Epson Stylus T20 Driver
Epson Easy Photo Print
Epson User's Guide
If you need to install individual items, click Custom.
EPSON
Custom
Install
Exit

4 Select **English**.

5 Click **Install** and follow the on-screen instructions. Software installation takes several minutes.

6 When prompted, connect the USB cable to the printer and any open USB port on your computer.

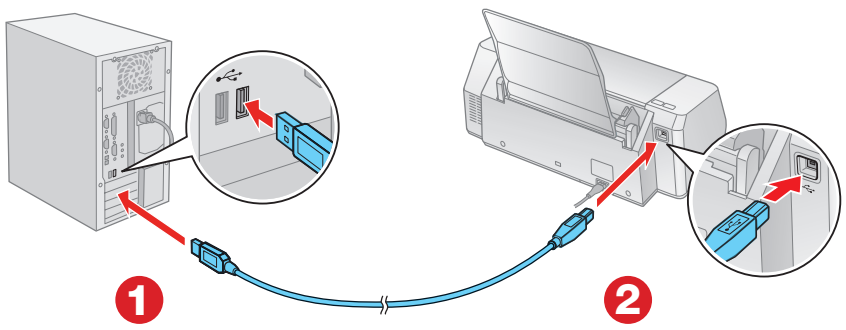

Note: If installation doesn't continue after a moment, make sure you securely connected and turned on the printer.

7 When you're done, remove the CD.

You're ready to print! Follow the instructions in the next column.

Macintosh

1 Insert the Epson Stylus T20 CD.

2 Double-click the **Epson** icon.

3 When you see the language selection screen, select **English**.

4 Click **Install** and follow the on-screen instructions. Software installation and setup take several minutes.

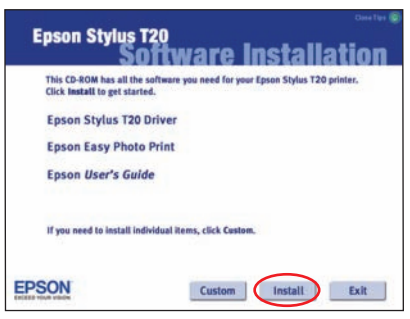
Epson Stylus T20
Software Installation
This CD-ROM has all the software you need for your Epson Stylus T20 printer. Click Install to get started.
Epson Stylus T20 Driver
Epson Easy Photo Print
Epson User's Guide
If you need to install individual items, click Custom.
EPSON
Custom
Install
Exit

5 When prompted, connect the USB cable to the printer and any open USB port on your computer. Make sure the printer is turned on.

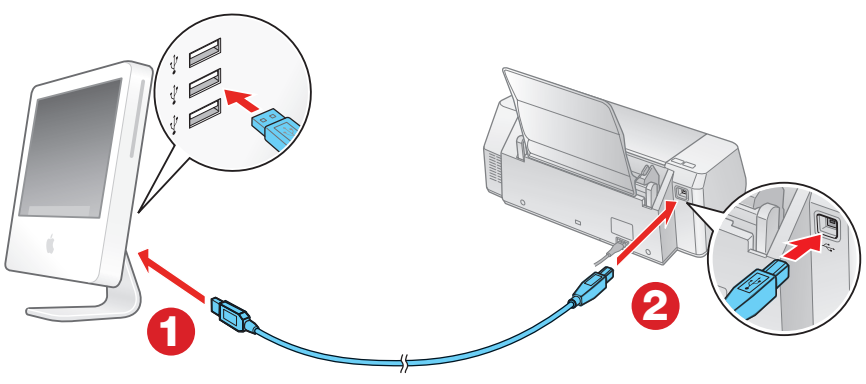

With Mac OS X 10.5.x, go to step 9. With Mac OS X 10.3.9 to 10.4.x, go to step 6.

6 When you see this screen, click **Open the Printer List**.

Epson Stylus T20
Software Installation
Before you can print, you will need to add the printer to the printer list.
Click Open the Printer List and then follow the on-screen instructions.
Open the Printer List
EPSON
Next

7 Then follow the tips to the right of the screen to add the printer.

Epson Stylus T20
Software Installation
Before you can print, you will need to add the printer to the printer list.
Click Open the Printer List and then follow the on-screen instructions.
Open the Printer List
EPSON
Next
Tips

8 Click **Next** again, if necessary.

9 Follow the on-screen instructions to install the rest of the software and print a test page.

10 Eject the CD.

You're ready to print! Follow the instructions in the next column.

Printing From Windows

1 Load plain paper or special Epson® media for the document or photo you want to print.

2 Open your document or photo and select **Print** or **Print Setup** from the File menu. You see a window like this:

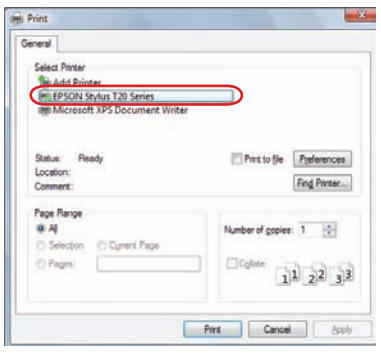

3 Make sure **EPSON Stylus T20 Series** is selected.

4 Click the **Properties** or **Preferences** button. (If you see a **Setup**, **Printer**, or **Options** button, click it first. Then click **Properties** or **Preferences** on the next screen.) You see the basic print settings window:

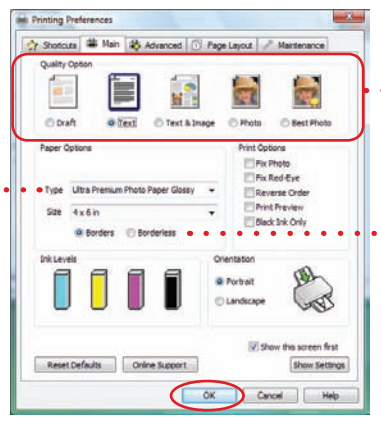

Choose your paper Type and Size

Select the type of document

To print borderless, click here

5 Choose your settings, then click **OK**.

6 Click **Print**.

After a moment, printing begins and you see this print status window:

Current ink levels

Display tips for better printing

Cancel printing

Printing on a Macintosh

Note: For instructions on printing in Mac OS X 10.5.x, see the on-screen *User's Guide*.

1 Load plain paper or special Epson media for the document or photo you want to print.

2 Open the document or photo and select **Page Setup** from the File menu. You see the Page Setup window:

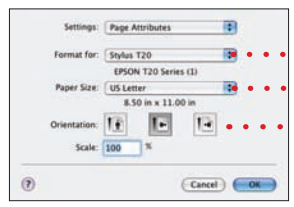

- Select **Stylus T20**
- Select your **Paper Size**
- Select your document or image orientation

3 Select **Stylus T20** in the Format for menu, and choose your paper size and document orientation. Then click **OK**.

4 Open the File menu and select **Print**. You see a window like this one:

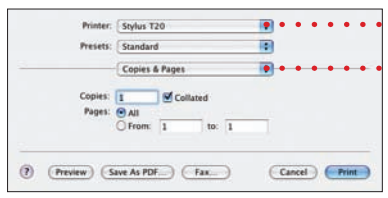

- Select **Stylus T20**
- Select **Print Settings**

5 Select **Stylus T20** in the Printer menu and open the **Print Settings** menu:

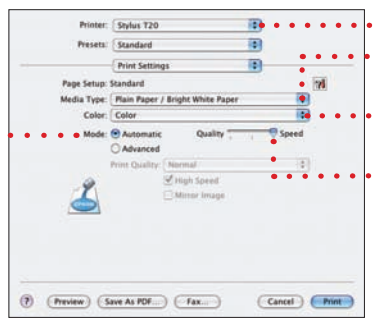

- Select **Automatic mode**
- Select **Stylus T20**
- Select your **Media Type**
- Select **Color** or **Black** ink
- Select higher quality or faster printing (if available)

6 Choose your print settings and then click **Print**.

7 To monitor the progress of your print job in OS X 10.3.9 to 10.4.x, click the printer icon when it appears in the dock on the bottom of your desktop.

You see a screen like this:

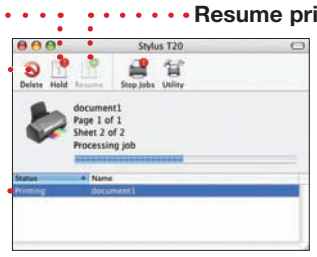

- Pause printing
- Resume printing
- Cancel printing
- Select the print job

8 When you're finished, close the Printer window or Print Center.

Any Questions?

Look here for answers:

On-screen *User's Guide*

Click the **T20 User's Guide** desktop shortcut for easy access to information about your printer.

On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson Technical Support

www.latin.epson.com

Telephone service

Country	*Telephone number*	*Country*	*Telephone number*
Argentina	(54 11) 5167-0300	Mexico	
Chile	(56 2) 230-9500	Mexico City	(52 55) 1323-2052
Colombia	(57 1) 523-5000	Other cities	01-800-087-1080
Costa Rica	(50 6) 210-9555 800-377-6627	Peru	(51 1) 418-0210
		Venezuela	(58 212) 240-1111

If your country doesn't appear on the list, contact your nearest Epson distributor.

Problems?

If your problem is listed here, try these suggestions. For more information, see your software Help or your on-screen Epson *User's Guide*.

The ▽ maintenance light is on (nothing prints).

If paper is out, load more paper and press the ▽ maintenance button to resume printing.

If paper is jammed, press the ▽ maintenance button to eject it.

If the paper doesn't eject, turn off the printer, open the cover, and pull the paper out from the front. Then reload paper, turn the printer on, and press the ▽ maintenance button.

You see banding (light lines) or your printout is blurry or smeared.

The print head nozzles may need cleaning; see the on-screen *User's Guide* for instructions.

The ink cartridges may need replacing. See the on-screen *User's Guide* for instructions.

Make sure the printable side of the paper is face-up. It's usually whiter or shinier.

Need Paper and Ink?

For the best prints, use genuine Epson ink and paper. Get them from your local store or contact Epson for dealer referral.

Photo Paper Glossy
Bright, instant-drying paper for great looking photos and projects. Available in different sizes, with or without margins.

Genuine Epson Inks

DURABrite Ultra

Look for the numbers below to find your cartridges.
It's as easy as remembering your number!

- 90N 90N Black
- 73N 73N Magenta
- 73N 73N Cyan
- 73N 73N Yellow

Epson and Epson Stylus are registered trademarks and Epson Exceed Your Vision is a trademark of Seiko Epson Corporation. DURABrite is a registered trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2008 Epson America, Inc. 2/08

CPD-25271

Cut out the card below and keep it with you when purchasing replacement ink cartridges.

Epson® T20 Ink Cartridges

For the best prints, use genuine Epson ink and paper.

- 90N 90N Black
- 73N 73N Magenta
- 73N 73N Cyan
- 73N 73N Yellow

DURABrite Ultra

Printed in XXXXXX